



ENGLISH

INSTRUCTIONS

»PRESTIGE«

ATTENTION: Please read these operating instructions carefully before using the electronic lock or setting a new number combination. We assume no liability for any malfunction caused by faulty changeover, use of force or improper handling nor in case of material or pecuniary damage, damage due to improper closing of the safe.

Your safe "Prestige" can be opened with a master code, a guest code or with one of the two emergency opening keys provided.

Each time you press a key is acknowledged with an acoustic signal.

Each key pressing can be corrected by pressing the "*" key.

If you don't want the entered code to be shown (the master or the guest code) when entering the code press "*" before entering it. Instead of the entered number it will be displayed "-".

It is not recommended to use non-alkaline batteries.

The safe is shipped from the factory with the master code 0-0-0-0-0-0 and the guest code 1-6-8-0.

For security reasons, we recommend that you immediately change the master code and user code to a personal code.

1. GETTING STARTED:

- Remove the round cover of the emergency opening lock that is located on the right part of the keyboard.
- Insert one of the two supplied emergency opening keys into the lock.
- Turn the key to the right.
- Open the door.
- Turn the key back to its original position and remove it.
- Remove the securing screw from the battery compartment cover from inside of the door.
- Slide the battery compartment cover down.
- Insert four 1.5 volt AA alkaline batteries (pay attention to the correct polarity when inserting the batteries).
- The display shows "HELLO" - the safe is now ready to use.
- Close the battery compartment.

2. MISSING INPUT

If you ever enter the wrong code and press the "#" key, a five-time acoustic signal appears and the message "ERROR-1" is written on the display. If you make another incorrect entry, "ERROR-2" is written on the display and also "ERROR-3" after three incorrect entries.

3. LOCK TIME AFTER AN INCORRECT ENTRY

If an incorrect code has been entered for three times, a five minute lock period will commence, during this period of five minutes no entry is possible. If a key is pressed during the lock period, it appears "HOLd05" written on the display and the remaining lock time is counted down until it expires. This lock time can not be *ed, even if you remove the the batteries.

4. BATTERY CHANGE

(If the display becomes weak, the writing is unreadable, or if the opening is no longer possible, you should immediately replace the batteries).

- If necessary, open the safe with the emergency opening key (see point 9 - opening with emergency opening key).
- Remove the securing screw from the battery compartment cover from the inside of the door.
- Slide the battery compartment cover down.
- Remove the old batteries.
- Insert new batteries (alkaline) – pay attention to the correct polarity.
- Close the battery compartment.

ATTENTION after a battery change, the stored codes (master code, guest code) will remain in the system/will be memorized.

5. CHANGING THE MASTER CODE

(The master code you have chosen will remain set /will be memorized in the system after a battery change)

- Press the "*" button twice.
- The display shows "SUPER".
- Enter the current master code (at delivery 0-0-0-0-0-0).
- Press the "#" button to confirm.
- The display will show "CC--".
- Enter "0 1" to change the master code.
- Press the "#" button to confirm.
- The display shows "NEW".
- Enter the desired master code (6 digits).
- Press the "#" button to confirm.
- The display will show "rPEAT".
- Repeat the desired master code (6 digits).

- m. Press the "#" button to confirm.
- n. If "GOOD" appears on the display, the master code has been successfully changed.
- o. It appears "CC --" on the display.
- p. Press the "*" key to exit the menu.

ATTENTION if during the programming the word "ERROR" appears on the display, then start programming from point 5 f.

6. CLOSING – SAVING THE GUEST CODE

- a. Close the door and enter the desired guest code (four to six digits).
- b. The entered code is shown on the display.
- c. Confirm the entry by pressing the "#" key.
- d. The safe is automatically locked and the display shows "CLOSE".
- e. After closing correctly, the display shows "CLOSEDd" and the selected code.
- f. If a correct closing is not possible, the display shows "ERROR".
- g. Start sealing it again as described in section 6-a.

7. OPEN WITH THE GUEST CODE

- a. With the door closed or the the blocking mechanism activated, enter the guest code you that you want (four, five or six digits).
- b. During the opening process "OPEN" appears on the display.
- c. After opening, "OPENEd" appears on the display.

INFO

If you want to lock the safe again with the previously selected guest code, you only have to press the "#" key with the door closed.

The safe closes as described at the point 6-d and can be opened with the previously selected guest code as was previously said on point 7.

8. OPEN WITH THE MASTER CODE

- a. Press the "*" key twice.
- b. The display shows "SUPER".
- c. Enter the current master code (at delivery 0-0-0-0-0-0).
- d. Press the "ENTER" button to confirm.
- e. The display will show "CC--".
- f. Enter "0 0" so that you could open using the master code.
- g. Press the "#" button to confirm.
- h. During the opening process the word "OPEN" appears on the display.
- i. After opening, "OPENEd" appears on the display.

9. OPENING WITH THE EMERGENCY OPENING KEY

- a. Remove the cover from the emergency opening lock located on the right of the keyboard.
- b. Insert into the lock one of the two supplied emergency opening keys.
- c. Turn the key to the right.
- d. If the battery of the safe is sufficient, "OPENEd" will be displayed and the safe will open.
- e. To remove the key, you must turn the key back to its original position – the safe will be closed again.

10. LOGGING

The safe model "PRESTIGE" is standardly equipped with a simple protocol function.

In order to be able to use the logging function correctly, we recommend setting the current date and time when the safe is put into operation.

The date is displayed in the format YYMMDD
(year - month - day).

The time is displayed in the format HHMMSS
(hour-minute-second).

PROGRAM THE DATE / TIME

- a. Press the "*" key twice.
- b. The display shows "SUPER".
- c. Enter the current master code (at delivery 0-0-0-0-0-0).
- d. Press the "#" button to confirm.
- e. The display will show "CC--".
- f. Enter "0 8".
- g. Press the "#" button to confirm.
- h. The display will show "SEt-dt".
- i. Now enter the last two digits of the current year (eg 17 for 2017), the current month (eg 05 for May) and the current day.
- j. Press the "#" button to confirm.
- k. A system time will be shown on the display.
- l. Enter the current time (in 24-hour format)
- m. Press the "#" button to confirm.
- n. The word "GOOD" appears on the display.
- o. Date and time have been set.
- p. The display shows "CC--".
- q. To exit the menu, press the "*" key.

READ THE OPENING PROTOCOL

- Press the "*" key twice.
- The display shows "SUPER".
- # the current master code (at delivery 0-0-0-0-0).
- Press the "#" button to confirm.
- The display will show "CC--".
- Enter "0 9".
- Press the "#" button to confirm.
- The display briefly shows "rECOrd".
- The last opening is displayed..

The journal is displayed in the following format "YYMMDD" "HHMM – the opening type".

Example Protocol: 1701011212-1

17	01	01		12	12	1
17 YY = Year	01 MM = Month	01 DD = Day	Printing button « 6 »	12 HH = Hour	12 MM = Minute	01 Type of opening

Press the key "6" to display the time and the opening type.

PROTOCOL INFORMATION (the opening type)

- 1 = open with a master code.
- 8 = open with a guest code.
- 9 = open with emergency opening key.

NAVIGATION IN THE PROTOCOL MENU

- Key "6" – display the time and the opening type.
- Key "2" – display the previous opening.
- Key "4" – display the date of opening.
- Key "8" – display the next opening.

11. RESET THE ELECTRONIC LOCK TO THE FACTORY SETTINGS

- Remove the door trim panel.
- Press the "RESET" button for five seconds.
- After five seconds, the word "RESET" appears on the display.
- The electronic lock is reseted to the factory settings.
 - Master code "0-0-0-0-0"
 - Date and time are in the system.
 - The opening protocol has been deleted.

Attention:
Your new Safe and it's content aren't automatically insured.
Please write a letter to your insurance about the insurance value you'd like.