

Operating instructions for the electronic-lock mod. Í ProStarí

!! Attention: Please read this operating instruction carefully, **before** you operate the lock or you try to tailor a new combination of numbers. We do not undertake any liability for functional disorder because of faulty switch over or use of violence or improper use and neither for damage nor for loss of property which could be put down i.e. to the not proper closing of the safe.

Generally

Any button-activity is confirmed by a flashing of the green LED and an signal tone sounds each time a button is pressed.. The maximum distance between 2 activities may not be more then 30 seconds otherwise the former entering is deleted.

Opening the safe for the first time:

For opening the safe for the first time proceed as follows:

1. remove the small central plate on the front panel
2. insert the key into the key-whole and turn it into a counter-clockwise direction
3. insert 4 pc batteries 1,5 Volt AA (safe was delivered without batteries)

Programm of an electronical lock

Before you use your safe for the first time you have to enter your personal code (reasons of safety). You aren't allowed to take the delivered code over. Before you carry out the simply programming please think about your code firstly. Use no personal data which can be thought by any persons. Keep your code and the keys in safe place where only you can find it. Don't let the keys in the safe.

1. open the safe
2. press the red button (inside of the door at the hinges)
3. there are three signal-tones and the yellow LED switches on. Now you have 20 seconds to start programming.
4. enter the combination you desired (at leased 3 numbers, at most 8 numbers) and confirm your entry by pressing the button **%B+**.
5. After confirmation of the combination by the button **%B+**the yellow LED goes off and shows, that the programming was successful.

Opening the electronical-lock

1. enter your own code and confirm your entry by pressing the button **%B+**.
2. the green LED flashes and now you have 5 seconds to open the safe
3. turn the handle to the right side to open the safe

Locking device time by entering the wrong code

If you enter the wrong code there are 3 signal-tones and the yellow LED flashes. Now you have two more attempts to enter the correct code. If you enter the code 3 times wrong the lock blocks for 20 seconds. During the locking-device-time the lock doesn't react to any entry.

mechanical emergency-opening

If you have forgotten your code or the battery is empty please do that:

1. remove the cover between the handle and the keyboard
2. put in the emergency-key and turn to the left hand side as far as it will go.
3. now you can open the safe as usual

Changing the batteries

push the battery-cover to the left hand side (inside the door) and change the batteries.