

# Operating instruction for Electronic Safe SPEEDY

**Attention!** Please read this operating instruction carefully before you operate the lock or you try to tailor a new combination of numbers. We do not undertake any liability for functional disorder because of faulty switch over or use of violence or improper use and neither for damage nor for loss of property which could be put down i.e. to the not proper bar of the safe.

## GENERAL

Any button activity is confirmed by a brief tone. The maximum distance between 2 activities may not be more than 10 seconds. Otherwise the former entering is deleted. Change the batteries immediately when the green and the red light flashes at the same time.

### 1. OPENING THE SAFE AFTER DELIVERY

- 1.1 Remove the plastic lid between the door handle and the keypad.
- 1.2 Insert the emergency key and turn it to the left.
- 1.3 By turning the door handle to the right, the safe will be opened.
- 1.4 Turn the emergency key back into its original position and take the key out.
- 1.5 Open the plastic lid on the inside of the door to insert the batteries.
- 1.6 Insert 4 pieces 1,5V AA batteries in the correct manner. After correct insert you will hear 1 signal sound.
- 1.7 Finally close the plastic lid.

### 2. PROGRAMMING A CODE

**Attention:** for this safe 2 different codes can be programmed (Usercode and Mastercode). For your personal security please insert both codes after opening the safe the first time.

**NEVER KEEP THE CODE OR THE EMERGENCY KEY INSIDE THE SAFE!**

#### a/ PROGRAMMING THE USER CODE / CHANGING THE USER CODE

- a.1 Open the safe.
- a.2 Press the red button inside the safe (at the back of the door, near the hinges).
- a.3 Type in the code (for security reasons at least 3 numbers but maximum 8 numbers) that you want. Push the "A" button to confirm your code.
- a.4 You will hear two [2] signal sounds after correct programming.
- a.5 Your user code has been successfully changed.

#### b/ PROGRAMMING THE MASTER CODE / CHANGING THE MASTER CODE

- b.1 Open the safe.
- b.2 Press two [2] times „0“ („00“).
- b.3 Press the red button inside the safe (at the back of the door, near the hinges).
- b.4 Type in the code (for security reasons at least 3 numbers but maximum 8 numbers) that you want. Push the "A" button to confirm your code.
- b.5 You will hear two [2] signal sounds after correct programming.
- b.6 Your user code has been successfully changed.

### 3. OPENING THE SAFE

- 3.1 Type in your personal Master- or User Code and confirm the code by pressing „B“.
- 3.2 If the code is correct, the green light flashes. Now you have 5 seconds for opening the safe by the door handle.

### 4. CLOSING OF SAFE

1. Enter your self-programmed code and confirm with button „B“.
2. The green LED flashes and you have five [5] seconds to close the safe door by turning the handle.
3. Turn the handle to the left for closing the safe.

### 4. WRONG CODE

You have 3 attempts to put in the right code. After 3 wrong codes have been entered, the electronic lock will shut down. For approximately 2 minutes the lock will not react on any button. After 2 minutes you have 3 more attempts to enter the correct code.

### 5. MECHANICAL EMERGENCY OPENING

If you forget your code or the batteries are empty, follow this:

- 5.1 Open the cap of the emergency lock between the keypad and the door handle.
- 5.2 Put in one of the 2 delivered emergency keys and turn it to the left.
- 5.3 Turn the door handle to the right.
- 5.4 The safe is now open.

### 6. BATTERY CHANGE:

- 6.1 Open the plastic lid of the batteries at the back of the door.
- 6.2 Change the 4 pcs. 1,5 Volt AA batteries in the correct manner.